User Manual

Model number: Xemio 756/766

For information and support, www.lenco.eu

CE

Table of Content

Content ……. 2

Unique Features……...3

Battery indicator…… 4

Locating the Controls…… 4

Basic Operation……. 5

Play Music ……. 6

Movie mode……..…… 7

Voice Recording……8

Playback Files …….....8

FM mode……..…….. 9

E-Book Function ……..9

Photo Browse……10

Game……..10

System Setting……...…11

Hold mode……..13

Use USB Disk……14

Firmware Upgrade ……..……..…14

Others setting……..……...15

AMV Convert Tool operation introduce……..……..18

Trouble Shooting ……19

Specification…… 19

Checking accessories:

- **Earphones x 1**
- **USB cable x 1**
- **Instruction manual & software CD x 1**

The MP3 player is a brand-new generation of digital portable device, supporting MP3/WAV music format ,voice recorder□AMV format play ,JPEG photograph browse and E-book text reading .Its perfect sound quality, great reliability and exquisite appearance make it a masterpiece. Devoutly hope to bring you great enjoyment in this digital era.

Unique Features

● Exquisite Appearance

Unique appearance designed and comfortable for handling

● Multi-Codec Player

e.g.: MP1, MP2, MP3, WMA, WMV, ASF and WAV Music format

● Firmware Upgrade

Providing the latest updated features via firmware upgrade from the website

● Drive Free U Disk

You may manage your files directly through “Portable Disk” in “My Computer” on Winows2000 Operating System or above without driver.

● “Private Space” Disk Mode

The flash memory can be divided into two parts by using the accessory tools and one is encrypted to hide the contents saved inaccessible by others. Keep Your Secret!

● Record/ Replay

The player supports recording through built-in microphone and saves as WAV and ACT formats. Meanwhile it supports real digital A-B replay or comparison replay.

● 7 Preset EQ

Normal, Rock, Pop, Classic, Soft, Jazz and DBB

● Multi-play Mode

Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random, Intro.

● Power Off

You may set Sleep Timer or Off Time mode in your own convenience.

Declaration

- Thank you for your purchase.
- Please read this manual carefully before using your new player.
- Contents in this manual may change possibly for better service.
- We have the right to make changes to this manual without notice.

❋ If the actual operations of your player are not the same as the instruction in this manual, please visit for latest product information.

● Battery Inducator

Indicates that battery is charging.

Indicates low battery power, the battery should be recharged.

Note: When the battery is fully charged the battery indicator will be completely yellow

Recharge the battery:

Connect the player via USB cable with the computer, battery will be automatically charged as shown as below pictures:

1. Locating the Controls

● Appearance & Keys

S/N	Description	S/N	Description
1	Menu / Return Button	6	Power switch
2	Vol / Hold key(Lock)	7	LCD display
3	Play/Pause/Enter/Stop	8	USB Socket
4	Previou track/Rewind(⏮)/VOL-	9	Earphone Jack
5	Next track/Forward(⏭)/VOL+		

- **LCD Window**

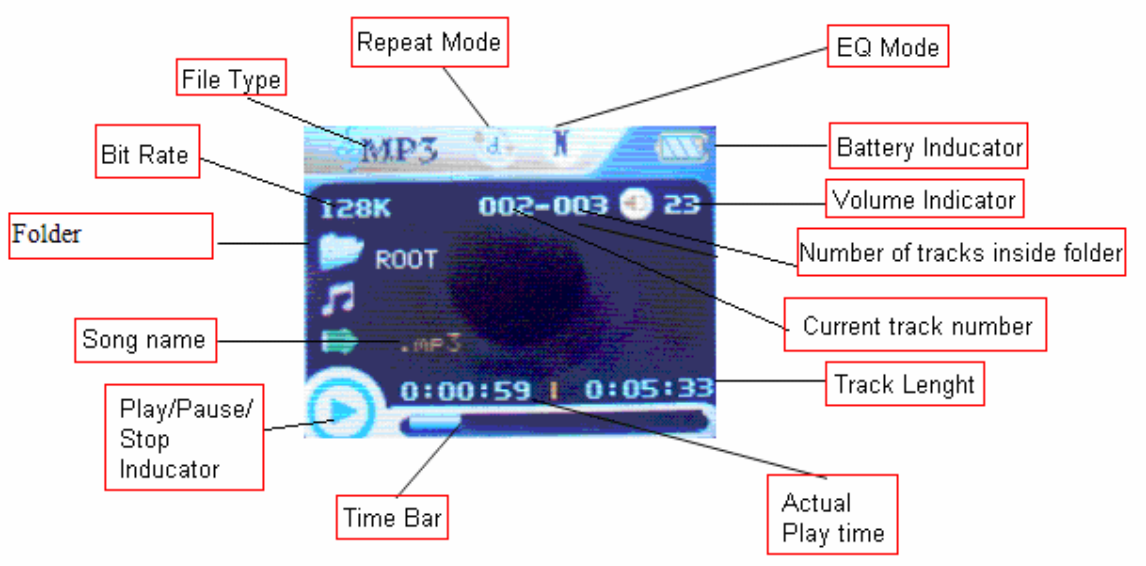

Basic Operation

- **Power On/Off**

1□ Turn ON / OFF by Power switch

- Push the ***Power*** switch (OFF→ON) , the player turn on automatically
- When the player is in ON mode:
- Push the power switch (ON → OFF) and the player will turn OFF automatically or press the play button.
- When connecting the USB plug to PC, the player turns on automatically and will enter USB mode

2□ Turn ON/Off by Play button (power switch in ON Mode)

- To turn ON / OFF the player hold the play button for 3 seconds.
- When connecting the USB plug to the PC, the player will enter USB mode automatically

- **Entering Different Modes**

These modes can be entered from the main menu.

Main menu:

(press the ***PLAY button*** to enter)

Movie mode: **Music mode:** **Record mode:** **Voice mode:**

FM **mode:** **E-Book:** **Photo Browse** **System setting**

GAME

Remark: *Press **M button for 3 seconds** to return to the main menu at the modes. When connecting the USB cable the player will enter USB mode automatically.*

- **Volume Control**

Adjust the volume when entered Music / Voice / Movie Mode

Press **VOL** button to enter the volume control, press the ⏮ / ⏭ button to adjust volume.

Note: During playback in Movie mode the player will not display the volume adjustment bar

Play Music

- **Basic Operation**

1. Connect the earphone to the player	2.Turn on the player
3. select by using < / > button music mode	4.press ***play button*** to enter the Music mode: 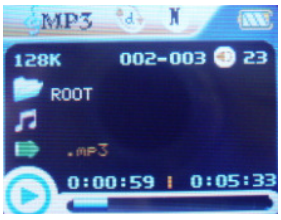

5. Press the **PLAY** button to play music	6. Choose music < button to choose previous track. > button to choose next track.

- **EQUALIZER Mode**

1.When playing music 	2.Press the ***M*** button to enter Play Submenu 3.select the 'Equalizer' and press PLAY button to confirm. 4.choose the preferred EQ and press play button to confirm.

- **Lyric Display**

This player supports "*.LRC" lyric files, and lyrics may be synchronous displayed while playing music.

- How to use lyric files?

Save the lyric file with the same name as that of the corresponding music file.

For example.: Music file name: GiGi-Sky.mp3

Lyric file name: GiGi-Sky.mp3.

- How to know whether the lyrics exist?

If the current song has matching lyric files, the lyric sign will be display at the top of music mode.

Movie mode

- **Basic Operation**

1. select by using < / > button "MOVIE" mode. 	2. Press the PLAY button to enter movie mode.
3. press the PLAY button to start playing AMV files	4. Choose movie < button to choose previous file. > button to choose next file.

Voice Recording

Before recording make sure, the battery is fully charged to guarantee the quality of the recording.

- **Record Mode**

1. select by using < / > button record mode	2. Press ***PLAY*** button to enter Record mode 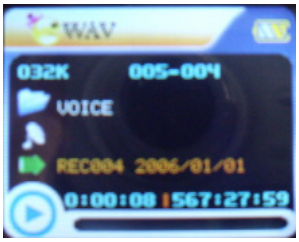
3. Press ***Play*** button to start recording. 4. Press ***Play*** button again to pause recording. 5.Press ***Play*** button to continue recording. 6. Press ***Play*** button for 3 seconds to save the recording.	

- **Select REC type**

1. At the record mode stop interface (stop the recording) 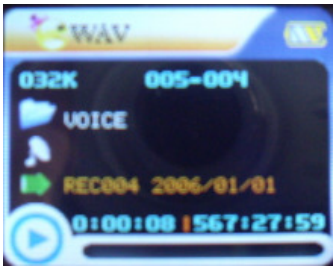	2. Press ***M button*** to enter record submenu
3. Use < / > button to select “rec type”	4. Press ***PLAY button*** enter this option • *REC type* *Fine REC – WAV format* *Long REC – ACT format*
5. Use < / > button to select desired recording type	
6. Press **PLAY** to confirm the type selected	
7. Press **PLAY** button to start recording	

Playback Files

1. select by using < / > button voice mode	2.Press **PLAY** button to enter Voice mode 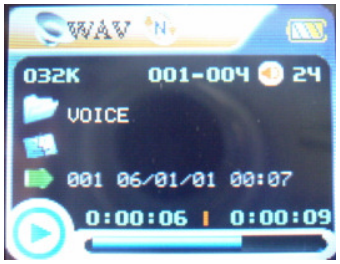

3. Press **PLAY** button to start playing.	4. Choose record < button to choose previous record file > button to choose next record file.

FM Mode

1. Select FM mode by using < / > button	2. Press **PLAY** buttons to enter the “FM mode”
3. Press < / > to tune 	:

Long press < / > to search the FM station automatically, when a station is found the search will stop and the player will start to play the FM radio automatically.
Press < / > one time to adjust the frequency by 0.1MHZ
Press the **PLAY** key to enter the sub-menu of FM. You can set the following function:

1. Search mode: press PLAY key to enter,
   a) Frequency (Freq) mode: press < / > key to search the radio station manual
   b) Search station: press < / > key to select the radio station which you have stored.
   c) Auto search: press PLAY key to search and store all the station automatically.
2. Search level: when a higher level is set the player will only plays the radio channels with very good reception. *Note: this will influence the number of channels that will be displayed.*
3. Save: when you want to save the FM frequency, which you are playing, just press PLAY key to save.
4. Delete: To delete station
5. Select band:
   a) Normal band: FM frequency band (87-108MHZ)
   b) Japan band: Japan frequency band (76-90MHZ)
6. Record FM: long press M to save files.
7. EXIT

E-Book function

This function supports all TXT file.

1. Use < / > button to select e-book mode	2. Press play button to enter e-book mode
3. Use < / > button to select desired text file, and press **Play** button to open the file	4.Press < / > button to turn the pages in sequence. (Only suitable for ”Manual play”)

In E-book function mode, press MENU key to enter sub-menu of text mode:

1. Local folder: to find your folder
2. Play set:
   a) manual play: manual select previous next page by press the < / > key.
   b) auto play: play automatically at preset space time
3. delete file: press < / > key to select the file that you want to delete, press PLAY key to confirm delete.
4. delete all: press PLAY key to confirm delete all the text files.
5. Exit: press Play key to exit the sub-menu of text.

Photo Browse (photo viewer)

1 select by using < / > button photo browse mode
2 press “PLAY” button to enter photo browse mode
3 Use < / > button to select the desired photo
4 Press play button to vieuw the photo
5 Use < / > button to flip the photo

Set auto play mode:

Set this mode and the player will automatically show all pictures that are inside the selected folder.

1. Enter photo browse mode.
2. Press M button to open the sub-menu.
3. Use < / > buttons to select play set
4. Press play button to enter play set
5. Use < / > buttons to select auto play
6. Press play button to confirm
7. Use < / > buttons to adjust the flip time
8. Press play button to confirm

To turn back to manual play repeat above step 1 till 5, only select manual play instead of auto play and confirm by pressing the play button.

Game

1. Use < / > button to select game mode.

2. press ***PLAY button*** to enter game mode.

3. There are 3 games available, use < /> to select the game, press PLAY to confirm

Game 1: RusBlock

- Press PLAY to start
- V is down block
- M is change direction
- Press M for 3 seconds return to main menu
- Play button is Pause
- < is left
- > is right

Game 2: Puzzle

- Press PLAY to start
- Play is down
- V is up
- M is return to main menu
- < is left
- > is right

Game 3: Sudoku

- Press PLAY to start
- V is up and down; Play button is numbering; long press M return to main menu
- < is left; > is right

System Setting

System parameters can be set here and every option varies according to firmware upgrading

Use < / > button to select system mode.

Press ***PLAY*** button to System Setting interface is as follows:

- **Parameters Introduction**

Clock	set the date and time
LCD set	Display settings
Language	Set language
Power off	Set a fixed time after which the player may turn power off automatically or set sleeptimer
Replay mode	Set on Replay mode
Online Mode	an option specially designed for “Private Space” function
Memory info.	Show memory capacity and percentage that has been used
Firmware Version	show firmware version
Firmware Upgrade	special for firmware upgrading

Exit	Exit system mode

- **Instruction**

○ **"Clock" setting**

1.Use < / > button to select clock	2. Press ***PLAY*** to enter clock.
3. Press **V** to flip between "YY-MM-DD" & "HH-MM-SS"	4. Push < / > button to adjust numbers
5. Press M to confirm and exit.	

○ **"LCD set" setting**

Operating steps is as follows:

1. Use < / > button to select LCD set.	2. Press ***PLAY*** button to enter "LCD set" submenu:
3. Press PLAY button to choose 'Black'	5. Press < / > button to adjust brightness and press ***PLAY*** to confirm and exit.

- **Black screen mode**

Can be set as above, if "0" is selected the functions are valid.

○ **"Language" setting**

1. Use < / > button to select language.	2. Press PLAY button to enter "Language" setting
3. Press < / > button to select desired language.	4. Press ***PLAY*** to confirm to exit.

Language lists:

English
French
German
Italian
Spanish
Portuguese
Dutch
Turkish

○ **Power saving**

For operating steps refer to Language setting.

Off Time when this mode is set the player will turn off automatically after the set period in seconds if no buttons have been touched. If "0" is selected, power saving function is invalid.

Sleep Time When this mode is set, the player will turn off automatically after the set period in minutes.

Note: Setting of Sleep Timer is valid only once, the set time will be cleared after power off. The time needs to be set again next time.

○ **Replay Mode**

Manual Replay means that at A-B Replay Mode the endpoint B can be set manually only.

Auto Replay means that at A-B Replay Mode the endpoint B can be set automatically. (Especially for English Reading files without music)

○ **Online Mode**

Operating steps refers to Equalizer setting.

Some operating systems (under Windows 2000 SP4) can not support two driver letters in one USB disk. Thus, if “Private Space” function is on, choose which disk you are going to use, i.e., “single ordinary disk” or “single encrypted disk”, in order for correct display of selected disk after connecting to PC.

○ **Memory Info.**

This function describes the total memory capacity and the percentage of the total capacity that is used.

○ **Firmware Version**

Shows the firmware Version information the that has been installed on the player.

○ **Firmware Upgrade**

It is specially designed for Firmware Upgrade.

HOLD Mode

1. **Press “V” button for 3 seconds to lock the operating keys (see the picture 1)**
2. **Press “V” button key to open the lock. (see the picture 2)**

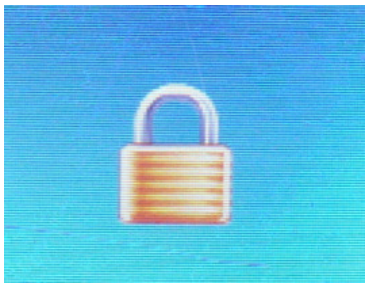

(1)

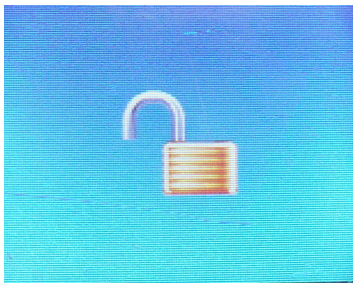

(2)

Use USB Disk

The player supports standard USB disk function with operating system of Windows98 (driver needed), Windows 2000 and XP/Vista (driver free)

Connect to PC:

Use the USB cable to connect the player with the PC. If connected correctly below picture will appear on the LCD display of the player.

○**Created new folder**

The player can identify the 99 folders set up in the U-disk.

Firmware Upgrade

The player supports firmware upgrading or maintenance through installing special tools on PC.

1. Enter the main menu.
2. Press > button to select “System Setting”
3. Press ***PLAY button*** to enter System Setting
4. Press > button to choose “Firmware upgrade” option
5. Press PLAY button to enter “firmware upgrade” interface:
6. Connect the player to PC
7. Run the “MP3 Player Update” program in upgrading tools on PC, then click “Select new firmware file” button. The UI is as follows:

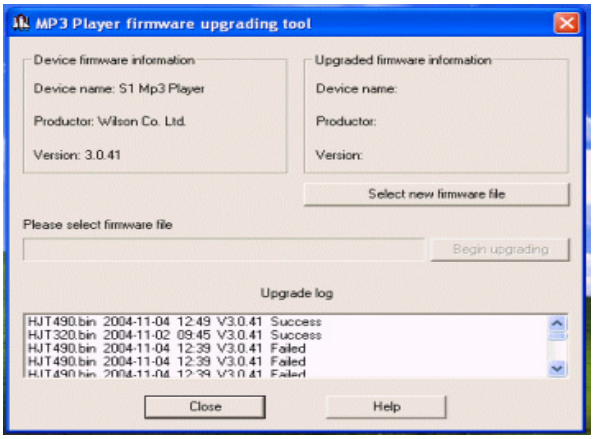

8□Choose new firmware program (You may find it in accessory CD or download form our website.□

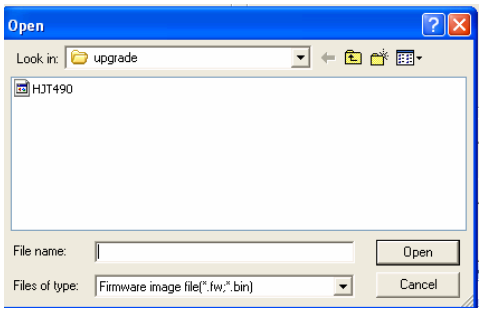

9□Click “Start” button, the system starts

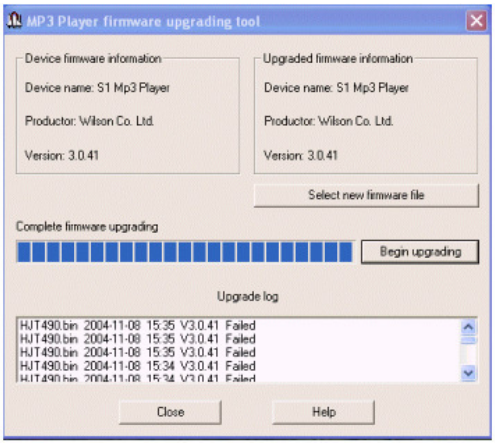

10□upgrading.

11□If upgrading successfully, the player reset.

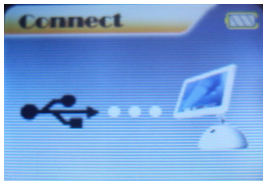

☞ ***Notice:***

- *Firmware upgrade is an operation to promote and optimize the performance of the player. Even if the firmware works without upgrading, there is no any influence on the normal operation of the player.*
- *Incorrect operation of firmware upgrading may cause the player working abnormally. Please read the manual carefully before operation and the people should operate firmware upgrading with basic knowledge in computer operation.*
- *The upgrading firmware is specially programmed for this player only and not suitable for other serial players, and other firmware is not suitable for this player as well.*

Others setting

- **Select Folders (At Stop Submenu)**

Files can be saved in different folders (folders should be created on PC in advance. The player supports identification of 8 level subdirectories.

1. Go to music / voice mode and if the player is playing files pause or stop them.
2. Press ***M*** to enter Pause / Stop Submenu.
3. Use < / > button to select local folder.
4. Press ***PLAY*** to enter Local Folder mode.
5. Use < / > button to select folders at root directory.
6. Press PLAY button to confirm and return the stop interface, or short press ***M button*** to enter next select directories as following view.

7. Use < / > ***button*** to select folders at this directories.
8. Press PLAY button to confirm and return the stop interface, or short press ***M*** button to enter next select subdirectories as following view.
9. Select and confirm folder \ to go back to the previous folder.

Note: Independent folders can be set at corresponding mode as Music mode, Record mode and Voice mode, i.e., three modes are not bound to correspond with the same folder.

- **Delete File**

Files can be deleted at corresponding modes as Music Mode, Voice Mode.

1. Go to music / voice mode and if the player is playing files pause or stop them.
2. Press ***M*** button to enter submenu
3. Use < / > buttons to choose “Delete / Delete All” option.
4. Press ***PLAY button*** to enter Delete file folder
5. Press ***PLAY button*** to enter Delete file folder submenu
6. Use < / > button to select song / folder
7. Press play to confirm selection
8. confirm or cancel deleteing by pressing Yes / No by using the < / > buttons and press play button to confirm.

Remark: *“Delete All” means to delete all the relevant files at current mode in current folder. (For example, at Music Mode executing “Delete All”, all the music files in current files may be deleted, while recorded files without change.)*

Note: *When deleting files on PC, please take care to eject the player safely before pulling out USB cable, otherwise files may not be deleted.*

- **Repeat mode**

When playing music and recorded files, different play modes can be selected.
Enter play/stop submenu to enter
The first option in Play Submenu is Play Mode. The player will play files according to the mode selected.

Normal	Play files in current folder in normal sequence and then play other files in next folders one by one
Repeat One	Play a single music file repeatedly
Folder	Play all music files in current folder in sequence and stop
Repeat folder	Play all music files in current folder repeatedly
Repeat All	Play all music files repeatedly
Random	Play music files in current folder randomly
Intro	Play the first 10 seconds of each music file in sequence in the current folder

- **Tempo Rate (Play Submenu)**

When playing music(Only for MP3 formats) or recorded files, different tempo rate can be set (faster or slower) without changing the tone and sound. Files.

1. When playing music
2. Press **M** button to enter Play Submenu
3. Use < / > button to choose Tempo Rate

4. Press **PLAY** button to enter Tempo Rate
5. Press > button to quicken tempo rate and press < button to slow down tempo rate.

- **Replay Mode**

  ○ **A-B Replay**

  1. Go to Music Mode or Voice Mode

  2. Press ***M*** (during playback) to enter Play Submenu.

  3. Use < / > to select “Replay”.

  4. Press ***PLAY*** to enter Replay.

  “A” flickers in Replay Mode icon and start point is to be set.

  5. Press > to set “A”.

  6. After “A” set, “B” flickers in icon , and endpoint B needs to be set.

  7. Press > to set “B”.

  Replay icon is set and A-B segment replay begins. When replay times count up to times set in advance, the player will quit from Replay Mode. At Replay Mode, pressing < can set “A and B” again to select another segment.

- **Replay Times (Play Submenu)**

  Replay times is the number of times the A-B sigment repeats itself before exit replay mode.

  Set replay times:

  1. go to music or voice mode
  2. Press M (during playback) to enter the play sub-menu
  3. Use < / > buttons to select replay times and confirm by pressing the play button.
  4. Use < / > buttons to adjust the number of replay times and confirm by pressing the play button.

- **Replay Gap**

  Replay gap means the break period between different playing times (in: seconds).

  Set replay gap:

1. go to music or voice mode
2. Press M (during playback) to enter the play sub-menu
3. Use < / > buttons to select replay gap and confirm by pressing the play button.
4. Use < / > buttons to adjust the gap period in seconds and confirm by pressing the play button.

AMV Convert Tool operation introduce

This tool can be used to transform media files into AMV files

1) Click “convert tools” in provided CD

2) Select “Setup” to install the program, the software will automatically installed.

3) Open AMV converter tool on the PC

a) The following interface would be shown in your computer:

b) click , select the file that you want to transform into AMV files

c) click to select the AMV file storage folder. In case the files will not be stored directly on the player, the converted files should be copied into player later

d) Then, right click the bottom blank area, choose “setting” to set the parameters (160x120) of the AMV file, the interface as following:

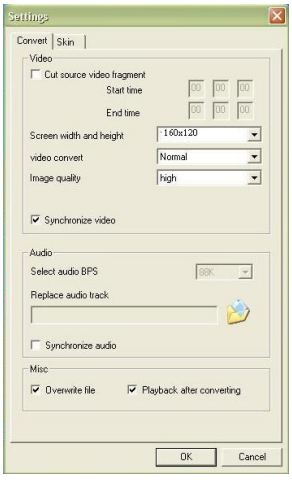

Please note that the screen width and height should be 160*120, this is also the maximum format the player supports.

i. Click OK and click directly button to start the transformation.

2□ After convert completes, the AMV Player will play AMV file automatically.

Trouble Shooting

No sound is heard from headphone.	❋ Check whether Volume is set "0" and connect the headphone plugs firmly. ❋ Check whether the headphone plug is dirty. ❋ Corrupted MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.
Characters in LCD are corrupted	❋ Check whether the right language has been selected.
Download of music files fails.	❋ Check whether USB cable is damaged and is connected properly. ❋ Check whether driver is installed correctly. ❋ Check whether the player's memory is full.

Specifications

Dimension	70*52*8mm	
Weight	48g	
LCD Window	1.8"	
PC connection	USB2.0(FS) □Read: 1000K Byte, Write: 1000-900K Byte□	
Flash memory	1GB – 8GB	
Battery	230 mAh	
	Max Play time: 6-7 hours	
Record	Sample rate	8KHz
	Recording format	ACT, WAV
	Recording time	35hours□ACT□128M Flash□
MP3□WMA□ASF	Max output of headphone	150 mV 32 Ohm
	MP3 bit rate	8K bps – 320K bps
	WMA□WMV bit rate	5K bps – 384K bps
	Frequency response	20Hz to 20KHz
	SNR	65 dB
Music format	MP1□MP2□MP3□WMA	
Working temperature	-5 to 40 □	
Operating System	Windows98/SE/ME/2000/XP/Vista	

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)